


Things to remember..

- ✓ Apply within temperature range of +10 - +40 C
- ✓ Seal grout joints wider than 3mm
- ✓ Don't apply in exterior applications
- ✓ Do not add water to any of the products
- ✓ Apply in well ventilated area
- ✓ Apply trial patch to ensure suitability



Step 1

Apply base coat directly to non-porous substrate in a liberal method. Ensure the surface is completely covered.

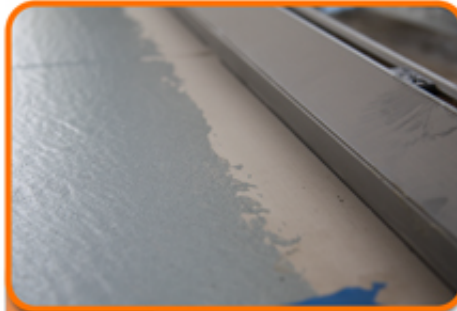

Step 2

Apply base coat approx 30mm within floor edge. Keep edge thick as this will help when peeling. Ensure coating is thick and even.



Step 3

Allow base coat to completely dry before applying top coat. Normal drying time should be 2-4 hours @ 20C before you can walk on it.



Step 4

Once base coat is dry, apply long lasting tape approximately half over edge of base coat and half onto substrate.



Step 5

Ensure all edges are covered with tape. Do not walk on base coat with shoes as they can damage the coating.




Step 6

Lay out the mesh over the base coat ensuring all edges of the mesh are overlapped.



Step 7

Apply top coat over mesh and base coat in a thick, even layer. Ensure the top coat covers the base coat completely and edges are covered onto tape.

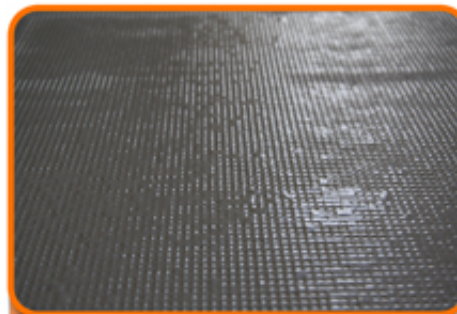

Step 8

Once the top coat is applied allow to sit untouched until completely dry. This should take approximately 12-24 hours @ 20C



Step 9

When its time to remove just grab an edge and peel away.